

Canon	
Kiss X9	Cable-C2
PowerShot G1X Mark II	Cable-C2
Eos 2000d	Cable-C2
EOS R	Cable-C2
EOS RP	Cable-C2
Rebel sl2	Cable-C2
Eos 5d mk iii	Cable-C1
Eos 5d mk iv	Cable-C1
Eos 5ds	Cable-C1
Eos 50d	Cable-C1
Eos 40d	Cable-C1
Eos 20da	Cable-C1
Eos 30d	Cable-C1
Eos 5dsr	Cable-C1
Eos 6d	Cable-C1
Eos d30	Cable-C1
Eos d60	Cable-C1
Eos 5d	Cable-C1
Eos 90d	Cable-C2
Eos 10d	Cable-C1
Eos 7d mk ii	Cable-C1
Eos 6d mk ii	Cable-C1
Eos 7d	Cable-C1
Eos 20d	Cable-C1
Eos 5d mk ii	Cable-C1
Eos 1d mk ii	Cable-C1
Eos 1d mk ii n	Cable-C1
Eos 1d mk iii	Cable-C1
Eos 1ds mk iii	Cable-C1
Eos 1d	Cable-C1
EOS 3	Cable-C1
EOS 5DS R	Cable-C1
EOS 1V	Cable-C1
Eos 1d mk iv	Cable-C1
Eos 1d c	Cable-C1
Eos 1d x mk ii	Cable-C1
Eos 1ds	Cable-C1
Eos 1ds mk ii	Cable-C1
Eos 1d x	Cable-C1
Eos 300d	Cable-C2
Rebel t3	Cable-C2
Eos 350d	Cable-C2
Eos 400d	Cable-C2
Rebel t6	Cable-C2
Rebel t6i	Cable-C2
Rebel t7	Cable-C2
Eos 600d	Cable-C2

Fujifilm	
IS Pro	Cable-N1
X-Pro 1	Cable-F1
X-e3	Cable-C2
X-t20	Cable-C2
X-t10	Cable-C2
X-70	Cable-C2
X-e1	Cable-C2
X-e2	Cable-C2
X-e2s	Cable-F1
X-q1	Cable-F1
X-H1	Cable-F1
X-a2	Cable-F1
X-a3	Cable-F1
X-30	Cable-F1
X-q2	Cable-F1
X-m1	Cable-F1
Gfx 50r	Cable-F1
Gfx 50s	Cable-F1
X-t2	Cable-F1
X-t1	Cable-F1
X-t3	Cable-C2
X-pro2	Cable-F1
X100f	Cable-F1
X-a1	Cable-F1
X-100t	Cable-F1
Finepix s1	Cable-F1
S3-pro	Cable-N1
S5-pro	Cable-N1

Hasselblad	
H5X i	Cable-C2
H5D-60	Cable-C2
H5D-50C	Cable-C2
H5D-50	Cable-C2
H5D-40	Cable-C2
H5D-200MS	Cable-C2
H5D-200C	Cable-C2
H5D-200	Cable-C2
H4X	Cable-C2
H3DII	Cable-C2
H6d-100c	Cable-C2
H4d-60	Cable-C2
H6d-50c	Cable-C2
H5d	Cable-C2
H6d	Cable-C2
H	Cable-C2
H4d-50ms	Cable-C2
H3d	Cable-C2
H4d-50	Cable-C2
H4d-200ms	Cable-C2
H4d-31	Cable-C2
H4d-40	Cable-C2
HV	Cable-S1

Rebel t1i	Cable-C2
Rebel t3i	Cable-C2
Rebel t7i	Cable-C2
Rebel t6s	Cable-C2
Rebel t5i	Cable-C2
Eos SL2	Cable-C2
Rebel t4i	Cable-C2
Rebel xs	Cable-C2
Rebel xti	Cable-C2
Rebel xt	Cable-C2
Rebel xsi	Cable-C2
Rebel t2i	Cable-C2
Rebel SL1	Cable-C2
Rebel SL2	Cable-C2
G1X II	Cable-C2
G1X III	Cable-C2
G12	Cable-C2
G11	Cable-C2
G5X	Cable-C2
G3X	Cable-C2
G15	Cable-C2
G16	Cable-C2
Rebel T5	Cable-C2
SX60 HS	Cable-C2
SX50 HS	Cable-C2
Rebel sl1	Cable-C2
G1X	Cable-C2
Kiss Digital N	Cable-C2
Kiss Digital F	Cable-C2
Eos 8000d	Cable-C2
Eos 200d	Cable-C2
Kiss Digital X	Cable-C2
Kiss X70	Cable-C2
Kiss X8i	Cable-C2
Kiss X7i	Cable-C2
Kiss X6i	Cable-C2
Eos 77D	Cable-C2
Powershot g12	Cable-C2
Eos 760d	Cable-C2
Eos 750d	Cable-C2
Eos 70d	Cable-C2
Eos 700d	Cable-C2
Eos 800d	Cable-C2
Eos 80d	Cable-C2
Kiss f digital	Cable-C2
Eos rebel t6	Cable-C2
Eos m6	Cable-C2
Eos m5	Cable-C2

Eos 650d	Cable-C2
Eos 60da	Cable-C2
Eos 1200d	Cable-C2
Eos 1100d	Cable-C2
Eos 100d	Cable-C2
Eos 1000d	Cable-C2
Eos 1300d	Cable-C2
Eos 500d	Cable-C2
Eos 60d	Cable-C2
Eos 550d	Cable-C2
Eos 450d	Cable-C2
Kiss n	Cable-C2
Kiss digital	Cable-C2
Digital rebel	Cable-C2
Powershot g11	Cable-C2
Powershot g10	Cable-C2
Powershot g15	Cable-C2
Kiss x2	Cable-C2
Powershot sx50 hs	Cable-C2
Powershot g3 x	Cable-C2
Powershot g1 x	Cable-C2
Powershot g16	Cable-C2
Kiss x4	Cable-C2
Kiss x6	Cable-C2
Kiss x5	Cable-C2
Kiss x3	Cable-C2
Kiss x50	Cable-C2

Leica	
DigiLux 3	Cable-P1
DigiLux 2	Cable-P1
V-Lux 4	Cable-P1
V-Lux 3	Cable-P1
V-Lux 2	Cable-P1
V-Lux Typ 114	Cable-P1

Lytro	
Illum	Cable-C2

Sigma	
SD1	Cable-C2
SD1 Merrill	Cable-C2
SD15	Cable-C2
SD14	Cable-C2

Contax	
N Digital	Cable-C2
NX	Cable-C2
N1	Cable-C2
N	Cable-C2
645	Cable-C2

Kodak	
DSC-530	Cable-C1
DCS-560	Cable-C1
DCS Pro 14n	Cable-N1

Konica minolta	
Maxxum 505si	Cable-S1
Maxxum 5d	Cable-S1
Maxxum 600si	Cable-S1
Maxxum 500si	Cable-S1
Maxxum 5000	Cable-S1
Dynax sweets	Cable-S1
Maxxum 3	Cable-S1
Maxxum 4	Cable-S1
Maxxum 7000	Cable-S1
Maxxum 700si	Cable-S1
Maxxum 9000	Cable-S1
Maxxum sweets	Cable-S1
Dynax 3	Cable-S1
Maxxum 9	Cable-S1
Maxxum 807si	Cable-S1
Maxxum 7d	Cable-S1
Maxxum 800si	Cable-S1
Dynax sweet	Cable-S1
Dynax 9000	Cable-S1
Dynax 5000	Cable-S1
Dynax 500si	Cable-S1
Dynax 505si	Cable-S1
Dynax 4	Cable-S1
Dimage 7i	Cable-S1
Dimage 7	Cable-S1
Dimage 7hi	Cable-S1
Dynax 5d	Cable-S1
Dynax 600si	Cable-S1
Dynax 800si	Cable-S1
Dynax 807si	Cable-S1
Dynax 9	Cable-S1
Dynax 7d	Cable-S1
Dynax 700si	Cable-S1
Dynax 7	Cable-S1
Dynax 7000	Cable-S1
Dimage 5	Cable-S1

Minolta	
Maxxum 5000	Cable-S1
Maxxum 500si	Cable-S1
Maxxum 505si	Cable-S1
Maxxum 4	Cable-S1
Maxxum 3	Cable-S1
Dynax 9000	Cable-S1
Dynax sweets	Cable-S1
Maxxum 5d	Cable-S1
Maxxum 600si	Cable-S1
Maxxum 9	Cable-S1
Maxxum 9000	Cable-S1
Maxxum 807si	Cable-S1
Maxxum 7d	Cable-S1
Maxxum 7000	Cable-S1
Maxxum 700si	Cable-S1
Dimage 5	Cable-S1
Dynax 9	Cable-S1
Dimage a2	Cable-S1
Dimage a200	Cable-S1
Dimage a1	Cable-S1
Dimage 7i	Cable-S1
Dimage 7	Cable-S1
Dimage 7hi	Cable-S1
Dynax 3	Cable-S1
Dynax 4	Cable-S1
Dynax 5d	Cable-S1
Dynax 7	Cable-S1
Dynax 7000	Cable-S1
Dynax 505si	Cable-S1
Dynax 500si	Cable-S1
Dynax 7d	Cable-S1
Dynax 5000	Cable-S1

Nikon	
P1000	Cable-N3
Z6	Cable-N3
Z7	Cable-N3
D3x	Cable-N1
D4	Cable-N1
D850	Cable-N1
D3s	Cable-N1
D300	Cable-N1
D2xs	Cable-N1
D3	Cable-N1
D810 e	Cable-N1
D4s	Cable-N1
D800 e	Cable-N1
D800	Cable-N1
D810	Cable-N1
D500	Cable-N1
D5	Cable-N1
D810 a	Cable-N1
D2x	Cable-N1
D300s	Cable-N1
D2hs	Cable-N1
D100(with mb-d100)	Cable-N1
D1h	Cable-N1
D1	Cable-N1
F5	Cable-N1
F100	Cable-N1
F90	Cable-N1
F6	Cable-N1
D1x	Cable-N1
D700	Cable-N1
D2	Cable-N1
D200	Cable-N1
D2h	Cable-N1
D80	Cable-N2
D70s	Cable-N2
D7500	Cable-N3
D750	Cable-N3
D7100	Cable-N3
D7200	Cable-N3
Coolpix A	Cable-N3
P7800	Cable-N3
D7000	Cable-N3
Df	Cable-N3
D90	Cable-N3
Coolpix P7700	Cable-N3
P7700	Cable-N3
D5200	Cable-N3

D5000	Cable-N3
D5100	Cable-N3
D3300	Cable-N3
D3100	Cable-N3
Coolpix p7800	Cable-N3
D5300	Cable-N3
D3200	Cable-N3
D610	Cable-N3
D600	Cable-N3
D5600	Cable-N3
D5500	Cable-N3

Olympus	
PEN E-PL8	Cable-O1
PEN E-PL7	Cable-O1
OM-D E-M1 M II	Cable-C2
E-500	Cable-O1
E-330	Cable-O1
E-100	Cable-O1
Om-d e-m1 mkii	Cable-C2
Om-d e-m1x	Cable-C2
Sp-565 uz	Cable-O1
Sp-560 uz	Cable-O1
Sp-570	Cable-O1
Sp-560	Cable-O1
Sp-570 uz	Cable-O1
Sp-590uz	Cable-O1
Sp-550 uz	Cable-O1
Pen e-pl5	Cable-O1
Pen e-pl2	Cable-O1
Pen e-pm1	Cable-O1
Pen e-pm2	Cable-O1
Sp-550	Cable-O1
Sp-510 uz	Cable-O1
Stylus 1	Cable-O1
Xz-2	Cable-O1
Sz-20	Cable-O1
Sz-30 MR	Cable-O1
Sz-11	Cable-O1
Xz 2ihs	Cable-O1
Stylus SH-2	Cable-O1
Stylus 1S	Cable-O1
Sp-810 uz	Cable-O1
Pen e-pl6	Cable-O1
Xz-2 ihs	Cable-O1
Pen e-p5	Cable-O1
Om-d e-m10 mkii	Cable-O1
Pen-F	Cable-O1
Pen e-p2 se	Cable-O1
Xz-1	Cable-O1
Pen e-pl3	Cable-O1
E-510	Cable-O1
E-520	Cable-O1
E-600	Cable-O1
E-450	Cable-O1
E-420	Cable-O1
E-30	Cable-O1
Pen e-p3	Cable-O1
E-410	Cable-O1
E-620	Cable-O1

Panasonic	
G90	Cable-P1
DMC-GF6	Cable-P1
DMC-G10	Cable-P1
DC-GH5	Cable-P1
DMC-G85	Cable-P1
DMC-G7	Cable-P1
DC-G9	Cable-P1
TS2	Cable-P1
S1R	Cable-P1
S1	Cable-P1
GX7 L1	Cable-P1
FZ50S	Cable-P1
FZ20S	Cable-P1
FZ-45	Cable-P1
FZ-35	Cable-P1
DMC-G85	Cable-P1
DMC-G80	Cable-P1
DMC-2500	Cable-P1
DMC-FZ2000	Cable-P1
L10	Cable-P1
Lc1	Cable-P1
Ts2	Cable-P1
Fz200	Cable-P1
L1	Cable-P1
Gx8	Cable-P1
Dmc-g80	Cable-P1
Gh5	Cable-P1
Gx1	Cable-P1
Gx7	Cable-P1
G9	Cable-P1
FZ330	Cable-P1
Fz50k	Cable-P1
G7	Cable-P1
G80	Cable-P1
G85	Cable-P1
Fz300	Cable-P1
Fz30k	Cable-P1
Fz2000	Cable-P1
Fz2500	Cable-P1
Fz20k	Cable-P1
Fz30s	Cable-P1
Gh3	Cable-P1
Gh4	Cable-P1
Fz30	Cable-P1
Fz50	Cable-P1
Gh2	Cable-P1
G10	Cable-P1

Pentax	
K-5 iis	Cable-C2
K-50	Cable-C2
K-500	Cable-C2
K-5 ii	Cable-C2
K-5	Cable-C2
K-3	Cable-C2
K-30	Cable-C2
K-7	Cable-C2
Mz-6	Cable-C2
K3 ii	Cable-C2
Ist ds2	Cable-C2
645z	Cable-C2
Mz-l	Cable-C2
Zx-l	Cable-C2
K200d	Cable-C2
K20d	Cable-C2
Ist dl	Cable-C2
Ist dl2	Cable-C2
K110d	Cable-C2
Ist d	Cable-C2
645d	Cable-C2
Ist ds	Cable-C2
Ist dcable-s2	Cable-C2
K1	Cable-C2
K100d super	Cable-C2
K10d	Cable-C2
K10 grand prix	Cable-C2
K100d	Cable-C2

E-400	Cable-O1
Pen e-p1	Cable-O1
Pen e-p2	Cable-O1
Evolt e-410	Cable-O1
Om-d e-m5	Cable-O1
Om-d e-m5 mkii	Cable-O1
Om-d e-m1	Cable-O1
Om-d e-m10	Cable-O1
Evolt e-510	Cable-O1

Fz20	Cable-P1
Fz150	Cable-P1
Ft 2	Cable-P1
Fz100	Cable-P1
Fz1000	Cable-P1
Fz15	Cable-P1
G2	Cable-P1
G1	Cable-P1
Gh1	Cable-P1
G70	Cable-P1
G3	Cable-P1
G6	Cable-P1
G5	Cable-P1
Gf1	Cable-P1

Samsung	
Nx-100	Cable-C2
Nx-11	Cable-C2
Nx-5	Cable-C2
Nx-10	Cable-C2
Gx-10	Cable-C2
Gx-20	Cable-C2
Gx-1s	Cable-C2
Gx-1l	Cable-C2
Nx300m	Cable-SA1
Ex2f	Cable-SA1
Nx300	Cable-SA1
Nx-500	Cable-SA1
Nx-1	Cable-SA1
Nx mini	Cable-SA1
Galaxy nx	Cable-SA1
Nx30	Cable-SA1
Nx1000	Cable-SA1
Nx210	Cable-SA1
Nx1100	Cable-SA1
Nx2000	Cable-SA1
Nx20	Cable-SA1

Sony	
RX1R II	Cable-S2
NEX 5N	Cable-S2
A65	Cable-S1
A65v	Cable-S1
A57	Cable-S1
A560	Cable-S1
A550	Cable-S1
A550v	Cable-S1
A700	Cable-S1
A77	Cable-S1
A900	Cable-S1
A99	Cable-S1
A100	Cable-S1
A850	Cable-S1
A77ii	Cable-S1
A77v	Cable-S1
A55	Cable-S1
A580	Cable-S1
A35	Cable-S1
A33	Cable-S1
A300	Cable-S1
A200	Cable-S1
A37	Cable-S1
A350	Cable-S1
A500	Cable-S1
A400	Cable-S1
A450	Cable-S1
A3500	Cable-S2
Rx10 iii	Cable-S2
Rx100 ii	Cable-S2
Rx100 iii	Cable-S2
Nex-3nl	Cable-S2
Rx10 iv	Cable-S2
Rx10	Cable-S2
Rx10 ii	Cable-S2
Hx60v	Cable-S2
Rx100 iv	Cable-S2
Rx100 platinum	Cable-S2
A58	Cable-S2
A3000	Cable-S2
Hx80	Cable-S2
A7iii	Cable-S2
Hx60	Cable-S2
Hx400V	Cable-S2
Rx100 v	Cable-S2
Rx100 vi	Cable-S2
Nex 3n	Cable-S2

Hx90	Cable-S2
Hx90v	Cable-S2
A9	Cable-S2
A7r	Cable-S2
A7ii	Cable-S2
A7r ii	Cable-S2
A7r iii	Cable-S2
A7r iv	Cable-S2
A7s ii	Cable-S2
Hx50v	Cable-S2
A7	Cable-S2
A68	Cable-S2
A5100	Cable-S2
A5000	Cable-S2
A6000	Cable-S2
A6300	Cable-S2
A6400	Cable-S2
A6500	Cable-S2
A99ii	Cable-S2
A7s	Cable-S2
Hx300	Cable-S2