

Canon

| | |
|-----------------------|----------|
| EOS 10D | CABLE-C1 |
| EOS 1D | CABLE-C1 |
| EOS 1D C | CABLE-C1 |
| EOS 1D mk II | CABLE-C1 |
| EOS 1D mk II N | CABLE-C1 |
| EOS 1D mk III | CABLE-C1 |
| EOS 1D mk IV | CABLE-C1 |
| EOS 1D X | CABLE-C1 |
| EOS 1Ds | CABLE-C1 |
| EOS 1Ds mk II | CABLE-C1 |
| EOS 1Ds mk III | CABLE-C1 |
| EOS 20D | CABLE-C1 |
| EOS 20Da | CABLE-C1 |
| EOS 30D | CABLE-C1 |
| EOS 40D | CABLE-C1 |
| EOS 50D | CABLE-C1 |
| EOS 5D | CABLE-C1 |
| EOS 5DS | CABLE-C1 |
| EOS 5DSR | CABLE-C1 |
| EOS 5D mk II | CABLE-C1 |
| EOS 5D mk III | CABLE-C1 |
| EOS 5D mk IV | CABLE-C1 |

| | |
|------------------------|---------------|
| EOS 6D | CABLE-C1 |
| EOS 6D mk II | CABLE-C1 |
| EOS 7D | CABLE-C1 |
| EOS 7D mk II | CABLE-C1 |
| EOS D30 | CABLE-C1 |
| EOS D60 | CABLE-C1 |
| EOS M | Ej kompatibel |
| PowerShot G9 | Ej kompatibel |
| Powershot N | Ej kompatibel |
| PowerShot S100 | Ej kompatibel |
| PowerShot S110 | Ej kompatibel |
| PowerShot S120 | Ej kompatibel |
| PowerShot S90 | Ej kompatibel |
| PowerShot S95 | Ej kompatibel |
| PowerShot SX510 | Ej kompatibel |
| Digital Rebel | CABLE-C2 |
| EOS 1000D | CABLE-C2 |
| EOS 100D | CABLE-C2 |
| EOS 1100D | CABLE-C2 |
| EOS 1200D | CABLE-C2 |
| EOS 200D | CABLE-C2 |
| EOS 300D | CABLE-C2 |

| | |
|-----------------------------|---------------|
| EOS 350D | CABLE-C2 |
| EOS 400D | CABLE-C2 |
| EOS 450D | CABLE-C2 |
| EOS 500D | CABLE-C2 |
| EOS 550D | CABLE-C2 |
| EOS 600D | CABLE-C2 |
| EOS 60D | CABLE-C2 |
| EOS 60Da | CABLE-C2 |
| EOS 650D | CABLE-C2 |
| EOS 700D | CABLE-C2 |
| EOS 70D | CABLE-C2 |
| EOS M | Ej kompatibel |
| PowerShot G1 X | CABLE-C2 |
| PowerShot G1 X mk II | CABLE-C2 |
| PowerShot G3 X | CABLE-C2 |
| PowerShot G10 | CABLE-C2 |
| PowerShot G11 | CABLE-C2 |
| PowerShot G12 | CABLE-C2 |
| PowerShot G15 | CABLE-C2 |
| PowerShot G16 | CABLE-C2 |
| PowerShot SX50 HS | CABLE-C2 |